

BUBBLE TENT




SETTING UP THE TENT

1) Unfold the tent from the packaging.

choose a smooth and clean surface to unfold tent. Roll out the tent until it is laying flat


2) To inflate tunnel

plug in electric air pump to AC outlet and secure attachments to blower. Following all safety precautions, place attachment into air nozzle on the rear base of inflatable and turn on. Hold firmly in place until inflatable section is firm. after inflating, press up the valve pin and close the valve

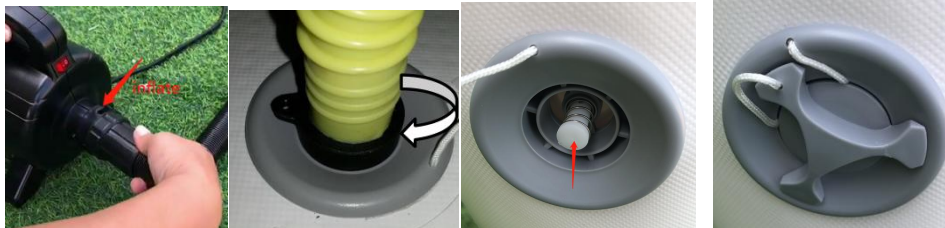

3) To inflate the room

tie the vent with the blower by the rope, turn on the blower to inflate, close the zipper at the door and keep the window open all the time **(if the room is too full of air, please don't close the door zipper completely)**

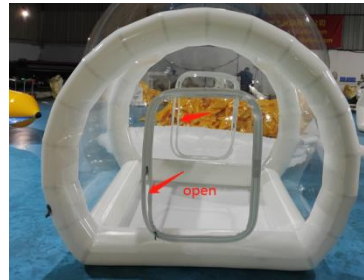

4) Secure the tent

fully secure tent into ground by the D ring



DEFLATE THE TENT

1) Turn off the blower, open the door, let air out

2) use the other side of the pump to deflate the air form the tunnel or press down the valve pin to let air out

